

CARE INSTRUCTIONS AND ASSEMBLY MANUAL

CAUTION READ ALL PRECAUTIONS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS EQUIPMENT KEEP THIS MANUAL FOR FUTURE REFERENCE





www.trojanfitness.com.au

TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	2
HARDWARE PACK	6
ASSEMBLY INSTRUCTIONS	
EXPLODED DIAGRAM	21
PARTS LIST	22
TROJAN 1 YEAR LIMITED WARRANTY	
TROJAN REPAIRS PROCEDURE	29
PROOF OF PURCHASE	30

BEFORE YOU BEGIN

Thank you for selecting the TRFPR70 by TROJAN®. For your safety and benefit, read this manual carefully before using the machine. As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, we guarantee you complete satisfaction through direct assistance from our factory. To avoid unnecessary delays, please call our customer service number. Our Customer Service Agents will provide immediate assistance to you.

Customer Service Number +1300 876 526 Mon. - Fri. 9.00 – 17.00 www.trojanfitness.com.au sales@trojanfitness.com.au

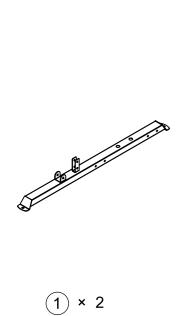
IMPORTANT SAFETY NOTICE

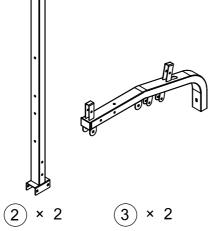
This exercise equipment is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your equipment. In particular, note the following safety precautions:

 
- 1. Keep children and pets away from the equipment at all times. DO NOT leave children unattended in the same room with the equipment.
- 2. Only one person at a time should use the equipment.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- 4. Position the equipment on a clear, leveled surface. DO NOT use the equipment near water or outdoors.
- 5. Keep hands away from all moving parts.
- 6. Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the equipment. Running or aerobic shoes are also required when using the equipment.
- 7. Use the equipment only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- 8. Do not place any sharp object around the equipment.
- 9. Disabled person should not use the equipment.
- 10. Before using the equipment to exercise, always do stretching exercises to properly warm up.
- 11. Never operate the equipment if the equipment is not functioning properly.
- 12. A spotter is recommended during exercise.
- 13. This equipment is designed and intended for home and consumer use only, not for commercial use.

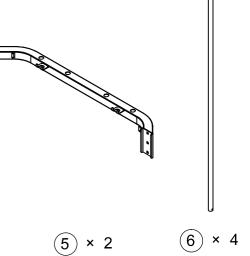
WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. WE ASSUME NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.

 
SAVE THESE INSTRUCTIONS.

 















9


× 1



   
20 × 1













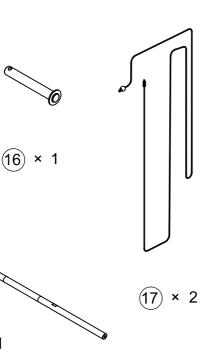 (7) × 2







(13) × 1

(18) × 1



(21) × 1

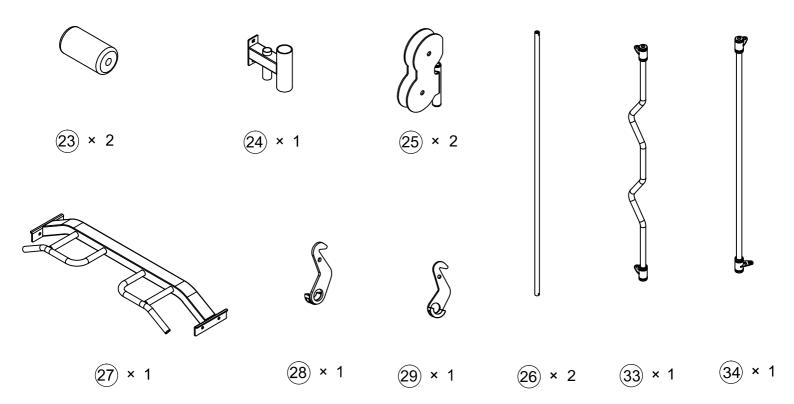




 


 


 
(22) × 1

 




 













<u>(39)</u> × 1

 
(47) × 1



<u>(51)</u> × 2

 (41) × 1









(54) × 8









<u>(58)</u> × 16



(55) × 2

(56) × 1

Pa

65 × 2

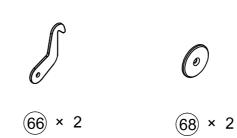
(57) × 1

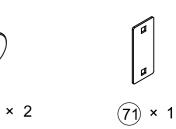
(59

<u>(59)</u> × 2





63 × 1







€
(72) × 2
(77) × 4
(85) × 2
(87) × 2

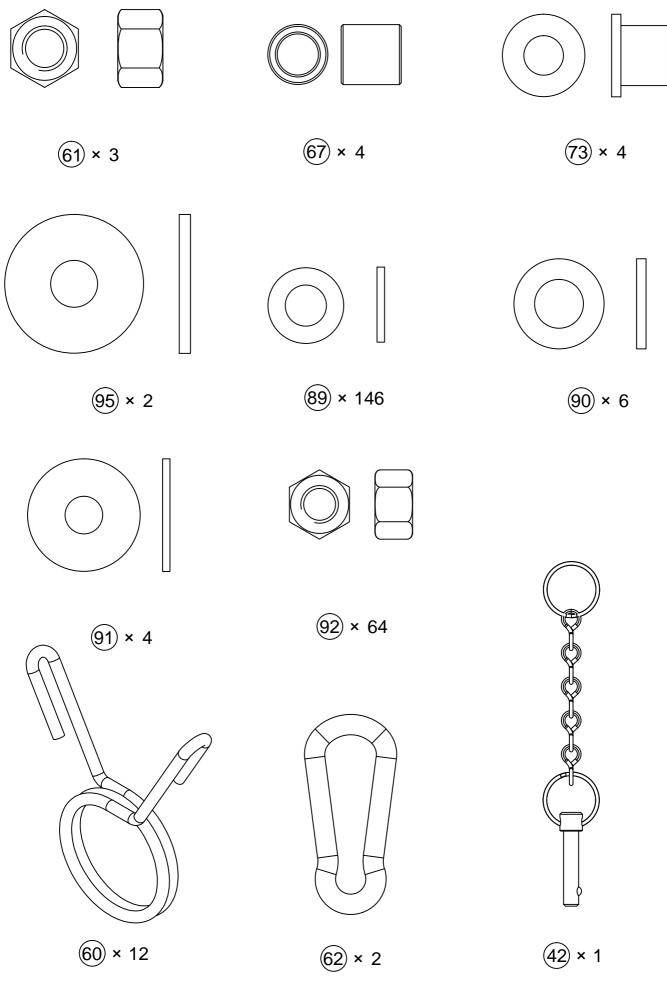


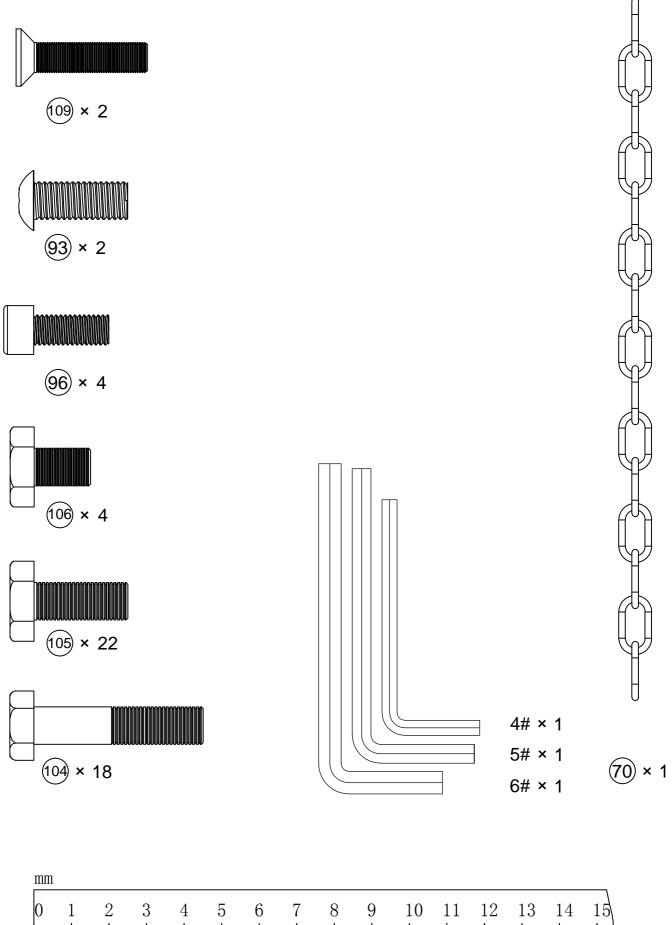


 



6"

 


 


 


 


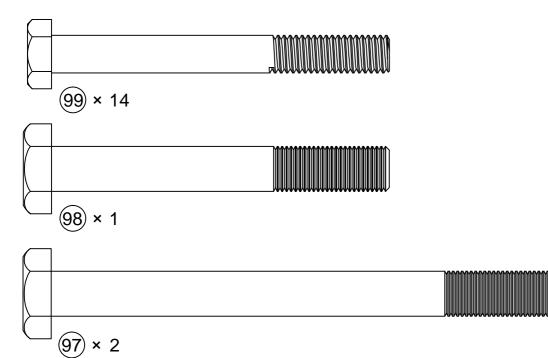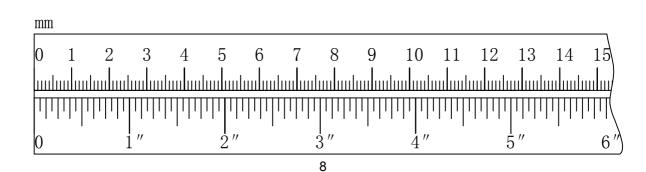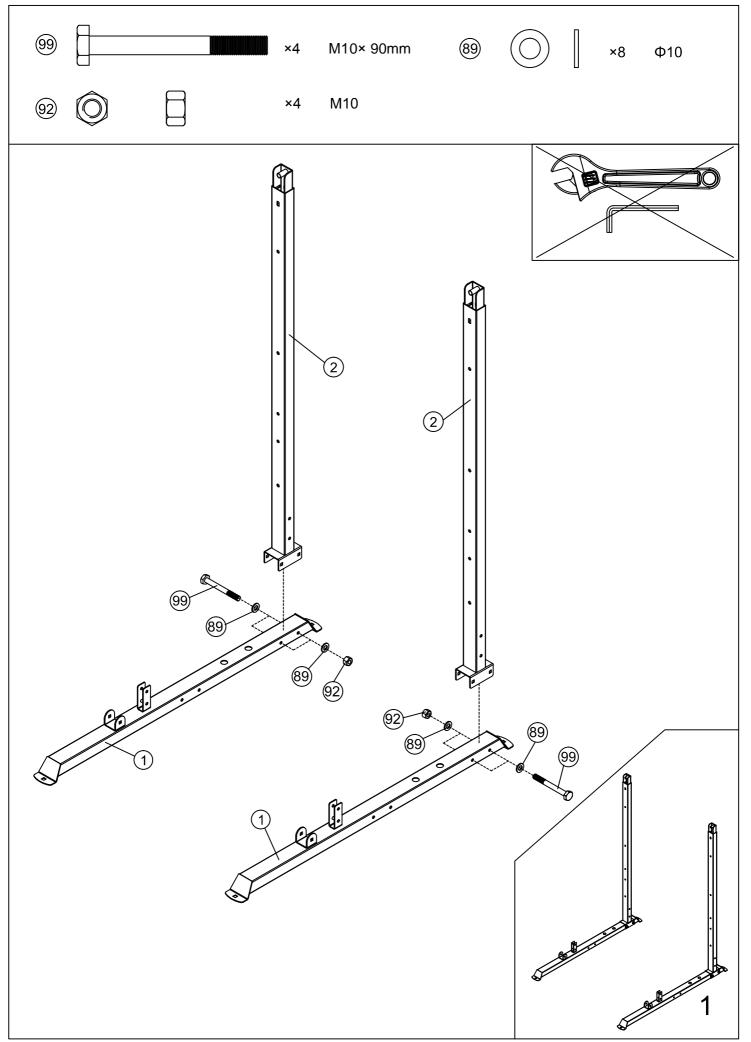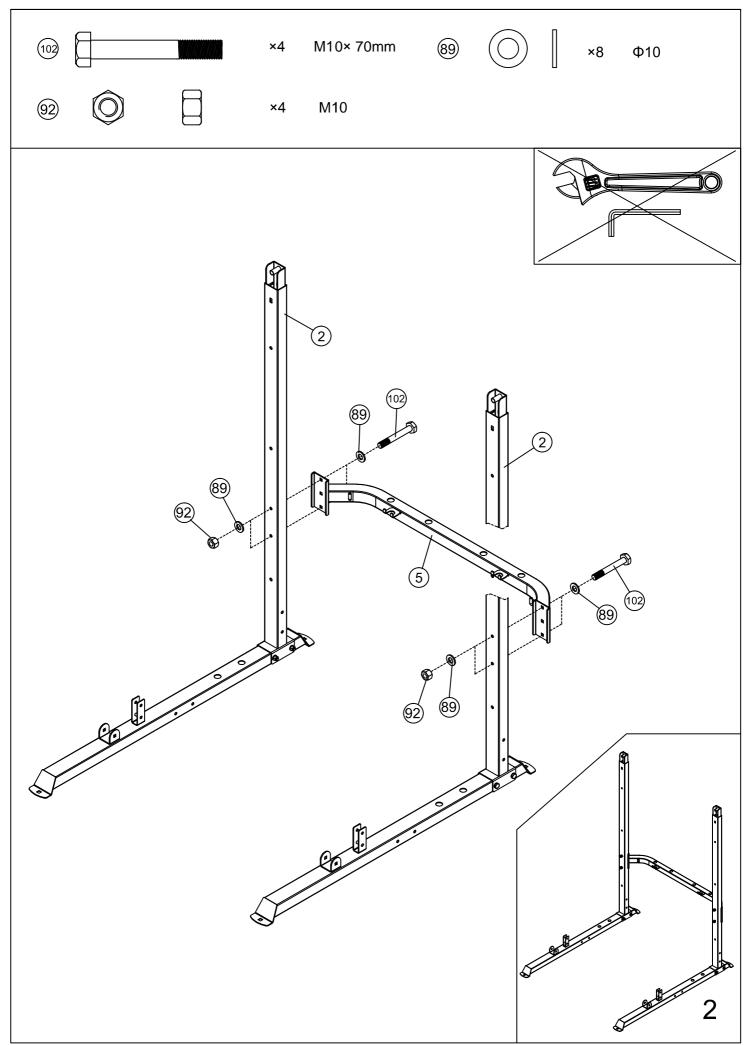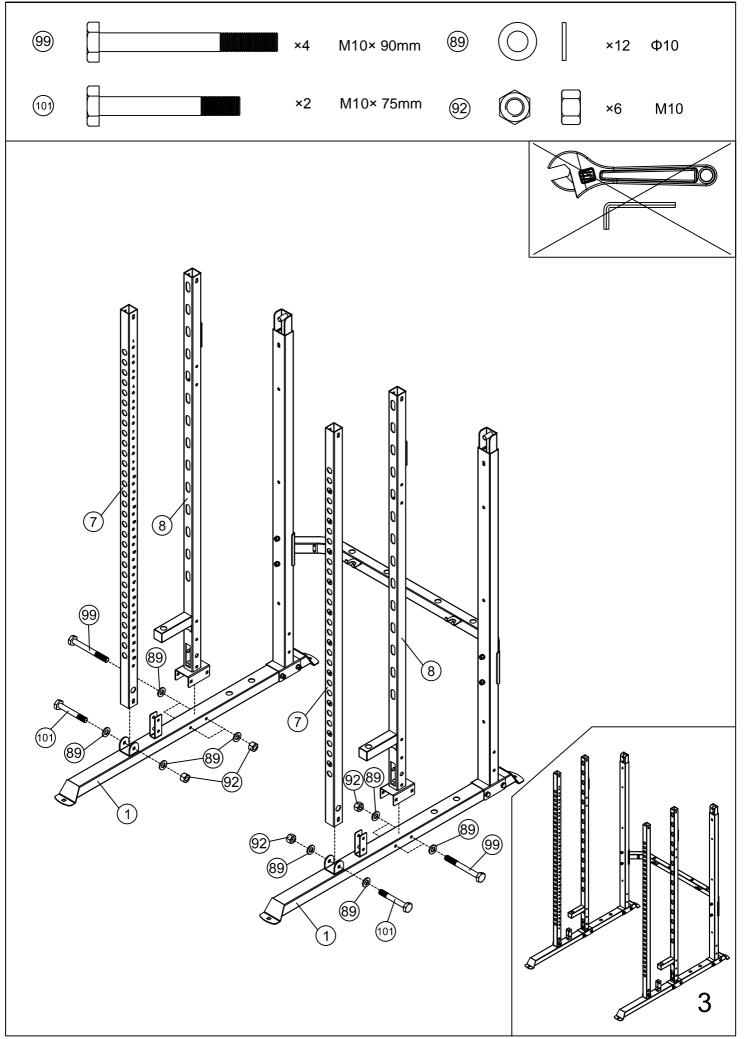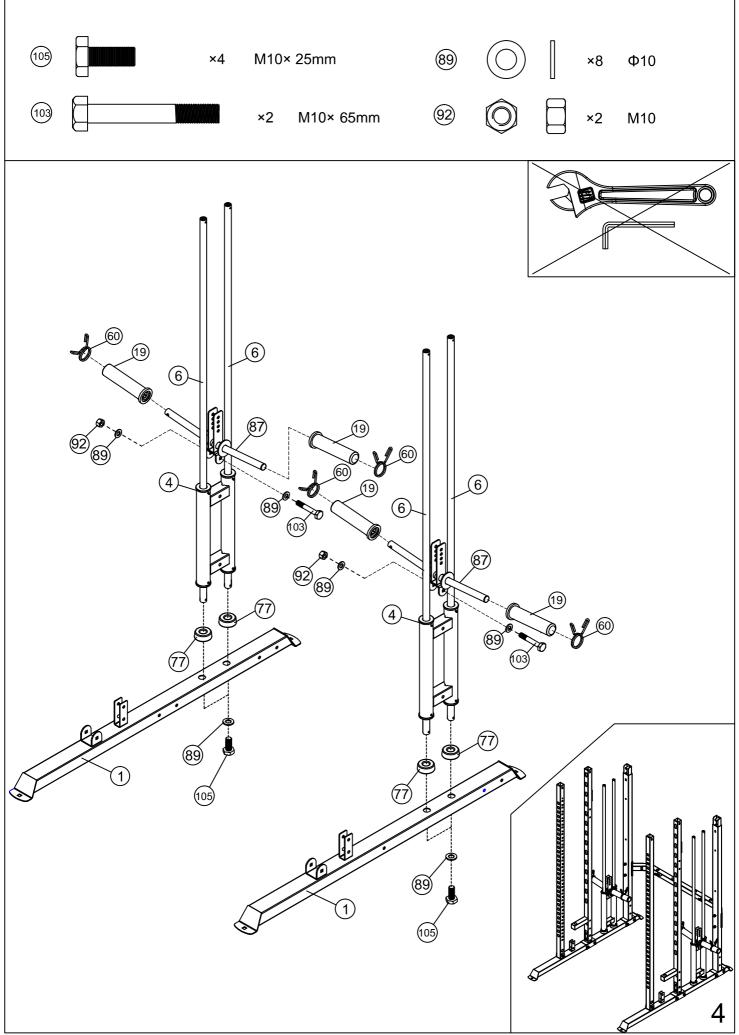


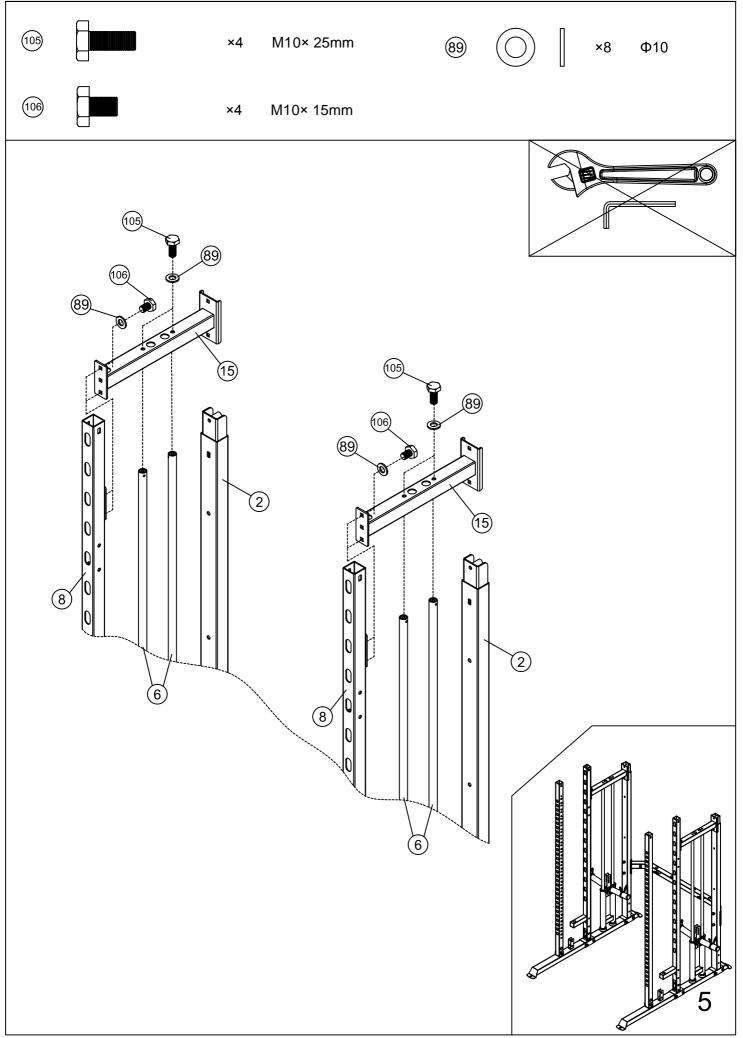


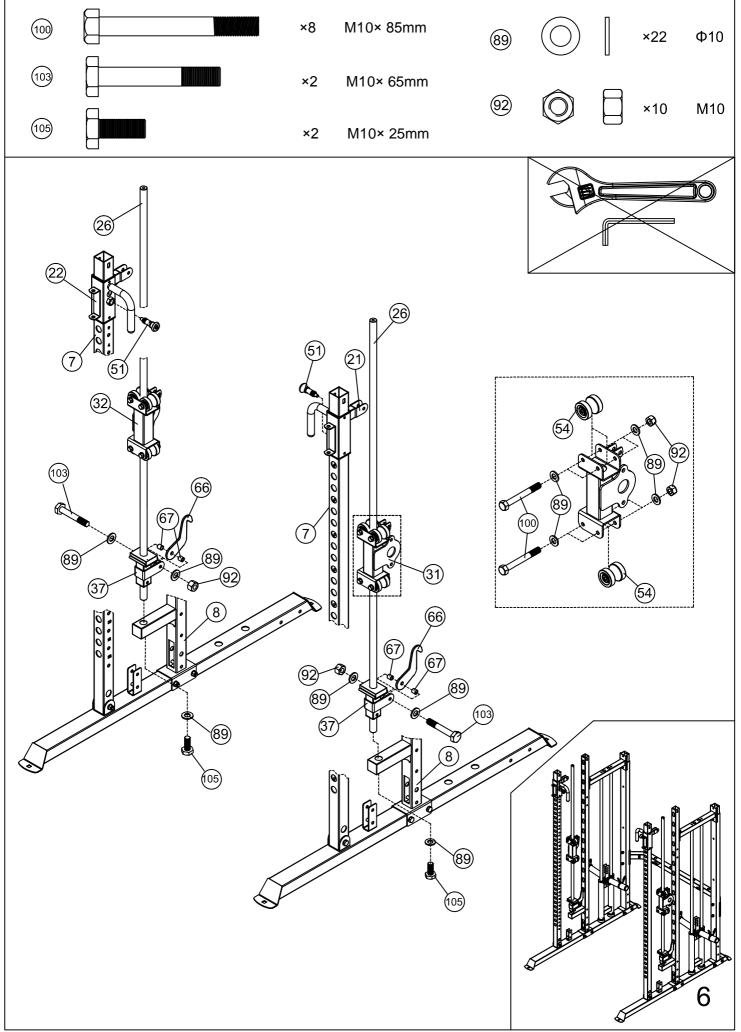


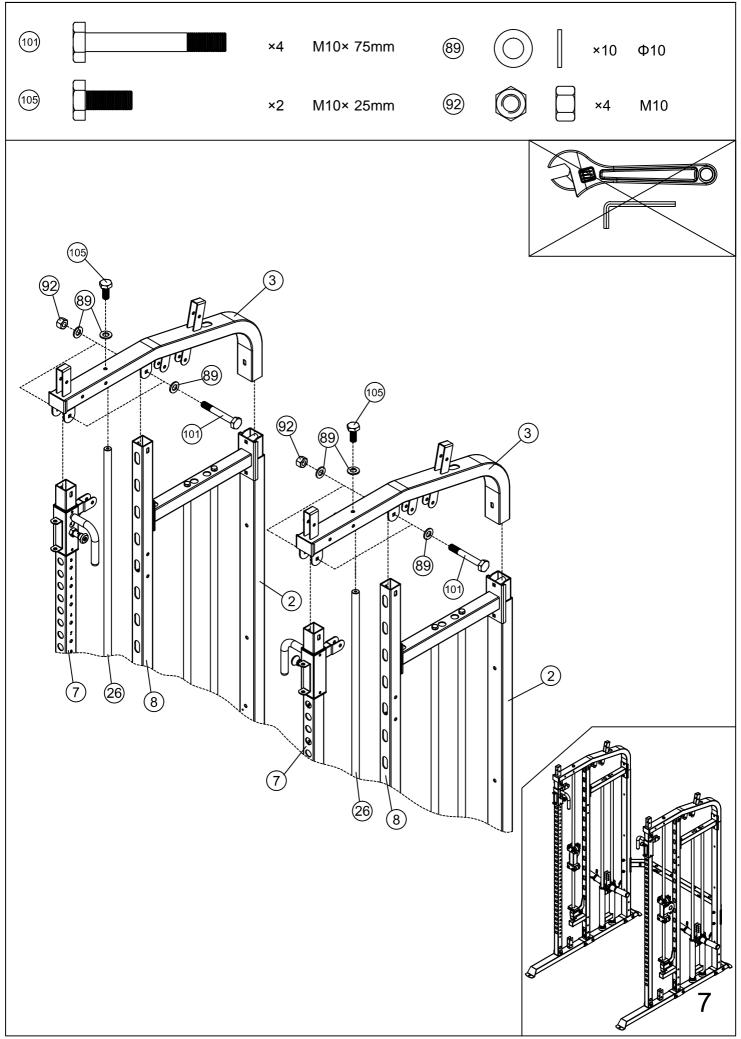


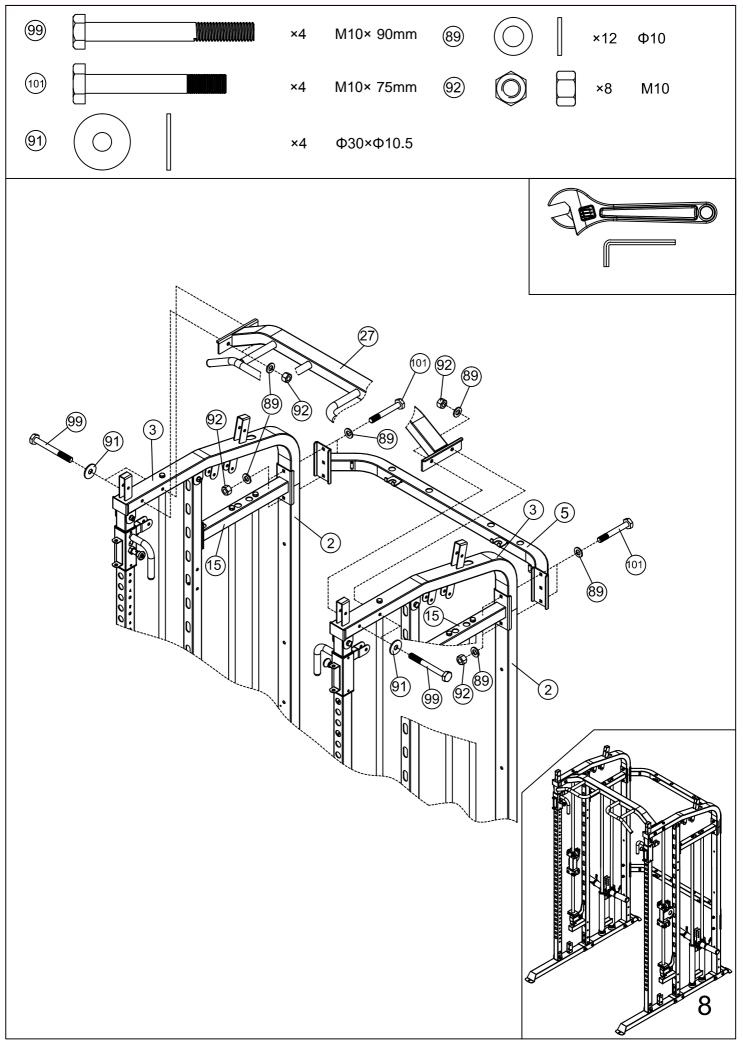


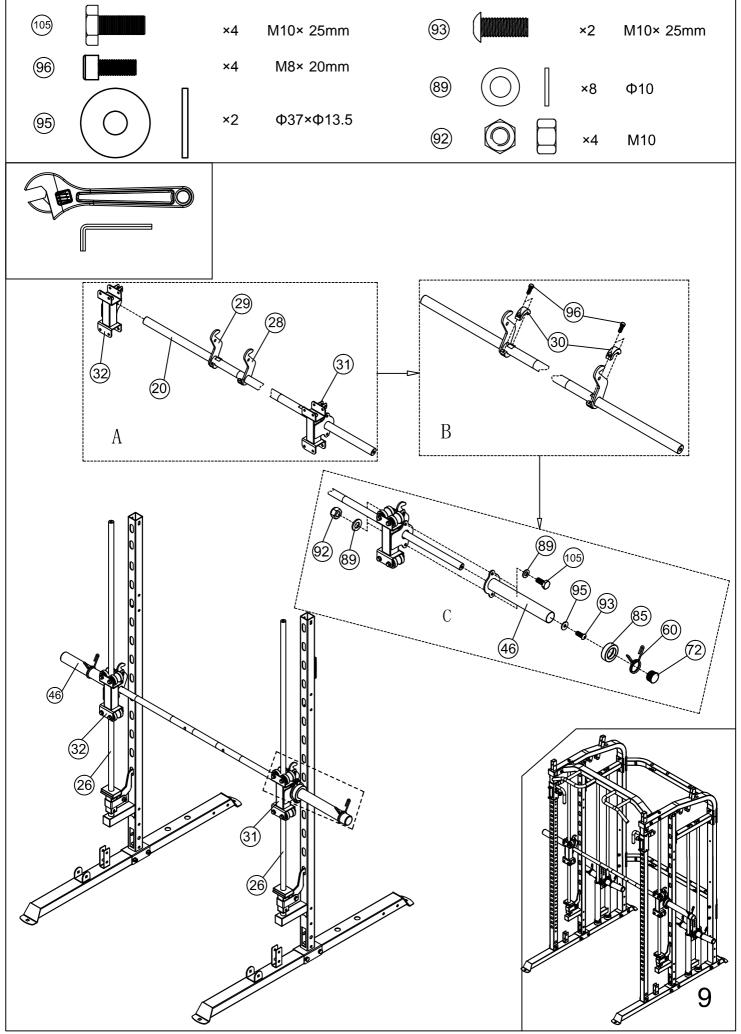


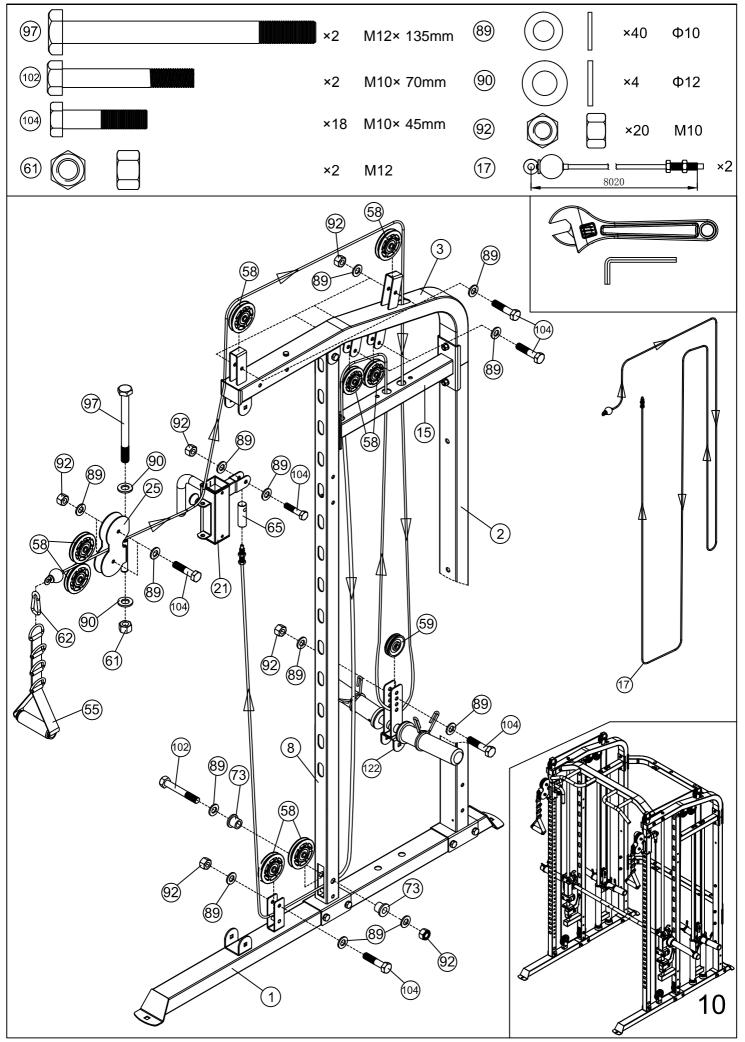


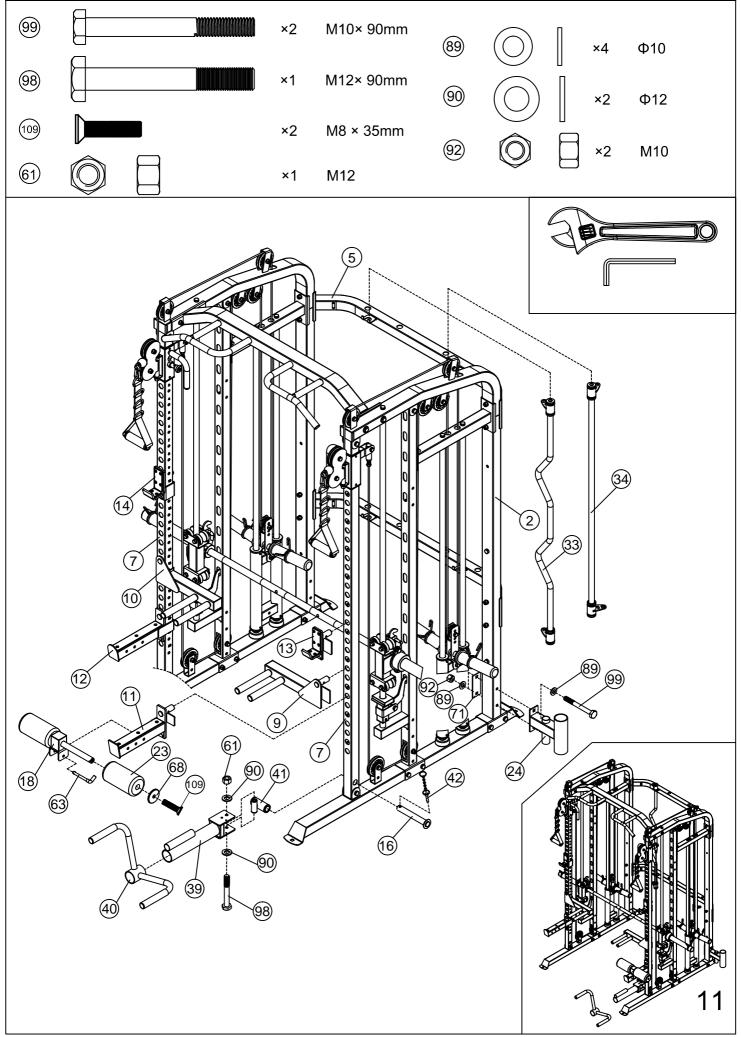


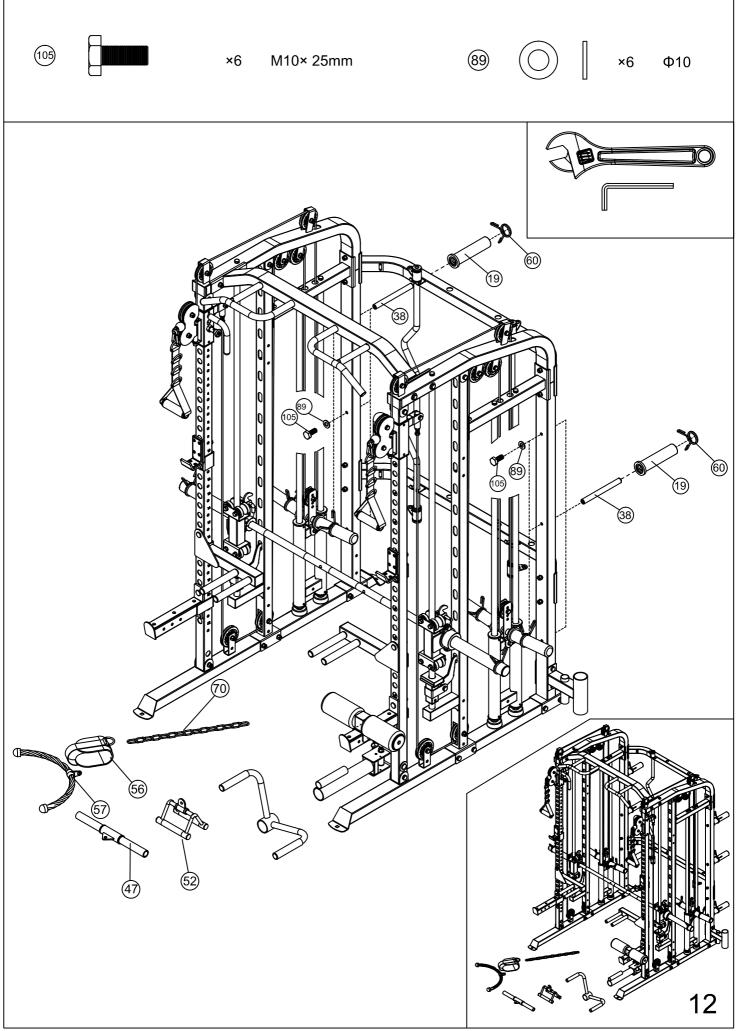


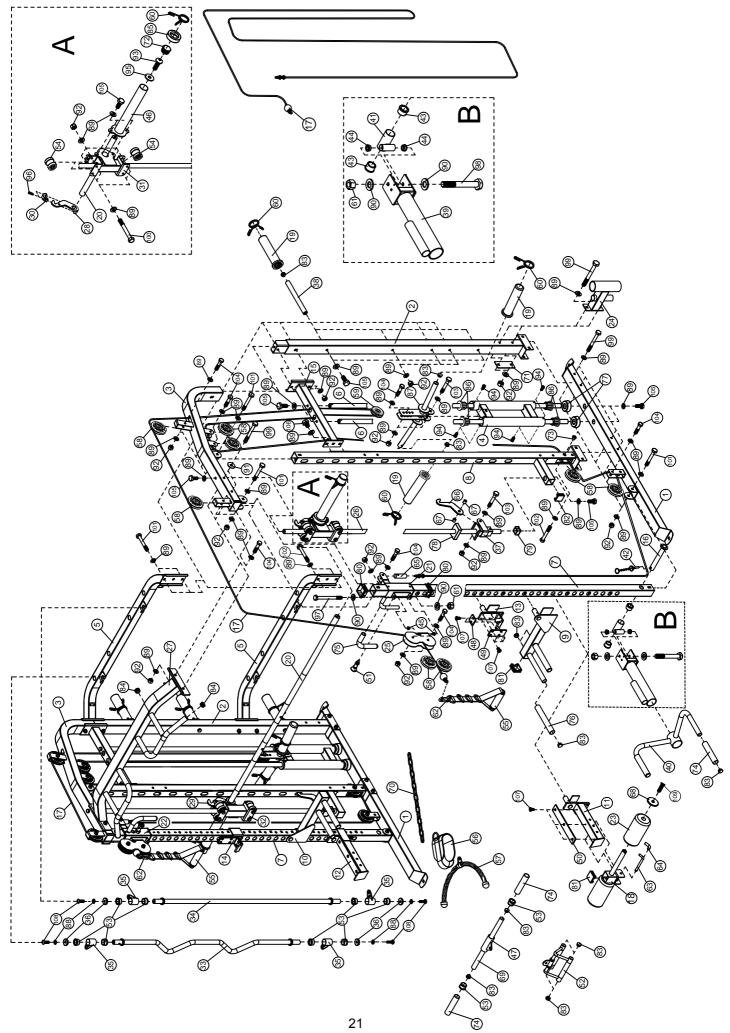












PARTS LIST

KEY NO.	PART DESCRIPTION	SPEC	QTY
1	Base Frame		2
2	Rear Post		2
3	Top Frame		2
4	Sliding Support		2
5	Connecting Frame Rear		2
6	Guide Rod Rear	φ25×1712	4
7	Front Guide Shaft	□50×3×1950	2
8	Intermediate Stand		2
9	Dip Bar L		1
10	Dip Bar R		1
11	Long Safety Rack L		1
12	Long Safety Rack R		1
13	Short Safety Rack L		1
14	Short Safety Rack R		1
15	Connecting Frame		2
16	Rotating Shaft	φ25×183	1
17	Double Pull Cable	L=8020mm	2
18	FOAM Frame		1
19	Short Sleeve Barbell Rack	φ50×210	10
20	Weight Rod	φ30×1845	1
21	Frame Slider L		1
22	Frame Slider R		1
23	FOAM	φ95×φ22×180	2
24	Barbell Socket		1
25	Pulley Case		2
26	Guide Rod	Ф25×1770	2
27	Horizontal Bar		1
28	Safety Hook L		1
29	Safety Hook R		1
30	Semicircle Fixed Seat		2
31	Roller Rack L		1
32	Roller Rack R		1
33	Cambered Bar (attachment)		1
34	Straight Bar (attachment)		1
35	Hub		4
36	Bar End	φ38×φ9×8	4
37	Safety hook Bracket		2
38	Weights Stow Rod	φ25×245	6
39	Rotating Frame		1

PARTS LIST

KEY NO.	PART DESCRIPTION	SPEC	QTY
40	Handle		1
41	Spacer		1
42	Pop Pin		1
43	Bushing	φ38×φ34×φ25×22	2
44	Bushing	φ25×φ21.8×φ12.2×8	2
45	Bushing	φ19×φ16×φ12×8	4
46	Long Sleeve Barbell Rack	φ50×350	2
47	Small Grip Frame		1
48	Rack Liner	52×45×5	2
49	Rack Liner	110×52×5	2
50	Rack Liner	280×45×5	2
51	Moving Lock Pin		2
52	V-type Handle		1
53	Bushing	φ38×φ34×φ27×26	10
54	Roller Set		8
55	Nylon Strap Iso-Handle		2
56	Ankle Strap		1
57	Rope		1
58	Pulley with Bearings	φ96	16
59	Small Pulley with Bearing	φ75×25	2
60	Spring Clip	φ49	12
61	Nut	M12	3
62	Hook	φ8	2
63	L Spring Pins	φ10×115	1
64	Rubber Sleeve	Ф13×Ф9.5×58	1
65	Adjustable Axle	φ25×75	2
66	Safety Hook	R25×φ11×6	2
67	Spacer	φ16×φ11×16	4
68	Plate	φ68×5	2
69	Small Handle Tube	φ25×1.5×400	1
70	15-Joint Chain		1
71	Bracket	120×50×3	1
72	End Cap	φ 48	2
73	Pulley Bushing	φ22×φ10.2×15	4
74	Dips Handle	φ23×150	4
75	Dips Handle	φ24×φ18×227	2
76	Dips Handle	Φ23×200	4
77	Rubber Stopper	φ62×φ24.5×25	4
78	Rubber Stopper	80×56×20	2

PARTS LIST

KEY NO	PART DESCRIPTION	SPEC	QTY
79	Safety Hook Bracket Guides	38×26×30×3	2
80	Slide Guide	□60×2.5×□50×25	4
81	Rectangular End Cap	□50	3
82	Rectangular End Cap	□45	2
83	End Cap	φ25	26
84	End Cap	φ28	4
85	Rubber Stopper	φ78×φ50×39	2
86	Bushing	φ55×φ46×⊡26×11	8
87	Plate Loader		2
88	Washer	8	4
89	Washer	10	146
90	Washer	12	6
91	Washer	φ30×φ10.5×2.5	4
92	Nut	M10	64
93	Allen Bolt	M10×25	2
94	Self-tapping Screws	ST2.9×9.5	16
95	Washer	φ37×φ13.5×3	2
96	Socket Cap Screw	M8×20	4
97	Hex Bolts	M12×135	2
98	Hex Bolts	M12×90	1
99	Hex Bolts	M10×90	14
100	Hex Bolts	M10×85	8
101	Hex Bolts	M10×75	10
102	Hex Bolts	M10×70	6
103	Hex Bolts	M10×65	4
104	Hex Bolts	M10×45	18
105	Hex Bolts	M10×25	22
106	Hex Bolts	M10×15	4
107	Hex-lob Screw	M6×12	18
108	Allen Bolt	M8×25	4
109	Allen Bolt	M8×35	2
	Allen wrench	6#	1
	Allen wrench	5#	1
	Allen wrench	4#	1

FITNESS TIPS AND TECHNIQUES Aerobic exercise

Aerobic exercise is any sustained activity that sends oxygen to your muscles via your heart and lungs. Aerobic exercise improves the fitness of your lungs and heart - your body's most important muscle. Aerobic exercise fitness is promoted by any activity that uses your large muscleS -arms, legs, or buttock, for example. Your heart beats quickly and you breathe deeply. An aerobic exercise should be part of your entire exercise routine.

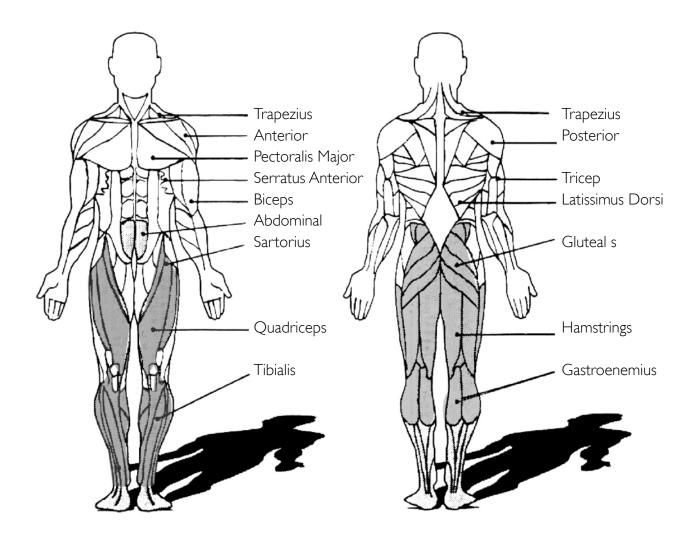
WEIGHT TRAINING

Along with aerobic exercising which helps get rid of and keep off the excess fat that our bodies can store, weight training is an essential part of the exercise routine process. Weight training helps tone, build and strengthen muscle. If you are working above your target zone, you may want to do a less amount of reps. And as always consult your physician before beginning any exercise program.

MUSCLE CHART

CYCLE

The exercise routine that is performed on the cycle will develop the lower body muscle group as well as condition the circulatory system and provide a good aerobic workout .These muscle groups are highlighted on the muscle chart below.



CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years, or are severely overweight, you must start slowly and increase your time on the equipment; a few minutes per workout.

Initially, you may be able to exercise only for a few minutes in your target zone, however, your aerobic fitness will improve over the next six to eight weeks. Don't be discouraged if it takes longer. It's important to work at your own pace. Ultimately, you'll be able to exercise continuously for 30 minutes. The better your aerobic fitness, the harder you will have to work to stay in your target zone. Please remember these essentials :

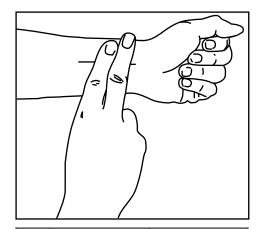
- Have your doctor review your training and diet programs to advise you of a workout routine you should adopt.
- Begin your training program slowly with realistic goals that have been set by you and your doctor.
- Monitor your pulse frequently. Establish your target heart rate based on your age and condition.
- Set up your equipment on a flat, even surface at least 3 feet from walls and furniture.

EXERCISE INTENSITY

To maximize the benefits of exercising, it is important to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. For effective aerobic exercise, your heart rate should be maintained at a level between 70% and 85% of your maximum heart rate as you exercise. This is known as your target zone. You can find your target zone in the table below. Target zones are listed for both unconditioned and conditioned persons according to age.

During the first few months of your exercise program, keep your heart rate near the low end of your target zone as you exercise. After a few months, your heart rate can be increased gradually until it is near the middle of your target zone as you exercise.

To measure your heart rate, stop exercising but continue moving your legs or walking around and place two fingers on your wrist. Take a six-second heartbeat count and multiply the results by 10 to find your heart rate. For example, if your six-second heartbeat count is 14, your heart rate is 140 beats per minute. (A six-seconds count is used because your heart rate will drop rapidly when you stop exercising.) Adjust the intensity of your exercise until your heart rate is at the proper level.



AGE	UNCONDITIONED TARGET ZONE (BEATS/MINS)	CONDITIONED TARGET ZONE (BEATS/MINS)
20	38- 67	33- 62
25	136-166	32- 32
30	135-164	30- 58
35	34- 62	129-156
40	32- 6	127-155
45	3 - 59	125-153
50	129-156	124-150
55	127-155	122-149
60	126-153	2 - 47
65	125-151	119-145
70	123-150	8- 44
75	122-147	117-142
80	120-146	115-140
85	8- 44	4- 39

WARM-UP AND COOL-DOWN

WORKOUT GUIDELINES

Each workout should include the following three parts:

A warm-up, consisting of 5 to 10 minutes of stretching and light exercise. A proper warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

Training zone exercise, consisting of 20 to 30 minutes of exercising with your heart rate in your training zone. (Note: During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes.)

A cool-down, with 5 to 10 minutes of stretching. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, plan three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is make exercise a regular and enjoyable part of your everyday life.

SUGGESTED STRETCHES

The correct form for several basic stretches is shown at the right. Move slowly as you stretch-never bounce.

I. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, back of knees and back.

2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back and groin.

3. Calf/Achilles Stretch

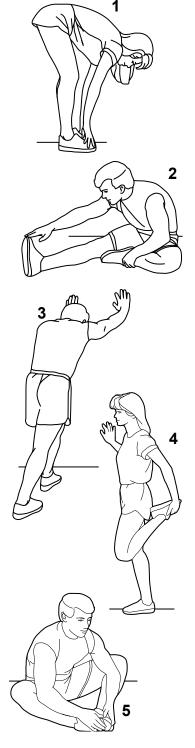
With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

4. Quadriceps Stretch

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.

5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.



TROJAN 1 YEAR LIMITED WARRANTY

Trojan Fitness Pty Ltd ("the Supplier") hereby provides a limited warranty to the original purchaser of this product ("the Consumer") that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the following stipulated periods from the date of purchase:

Exclusions

The warranty does not include and will not be construed to cover products damaged as a result of disaster; misuse; commercial use; use not in accordance with the written instructions included with the product; abuse; and/or any non-authorized modification of the product. It also does not cover replacement of the light bulbs and other expendables. All demo models carry a 3 month warranty.

Waiver

The warranty provided herein and the obligations of the Supplier are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence or any act or omission on its part.

Claims under I Year Limited Warranty Within 7 days of purchase: The faulty product will be exchanged (provided that the product is in its original packaging with all accessories).

TROJAN REPAIRS PROCEDURE

I. Procedure for repairs

Should you experience any faults or breakdowns on yourTrojan TRFPR70, please adhere to the following procedure to have the fault rectifi ed speedily and professionally.

- Do not return the product to the store*
- Call 08 9301 5557 to log the faulty product (under warranty or out of warranty)
- The operator or technical advisor will try identify the fault, and will book a service team call out.
- •The service team will endevour to fi × the problem in your home on an agreed date and time.Applicable to all Metro urban areas, i.e 25 Km's from the CBD.
- Only if the fault cannot be repaired in the convenience of your home, will the service team take the faulty product back to the service center, in Metro urban areas.
- Items repaired in our service center will be returned to your home on an agreed date and time.

* Note:

Should you live in an outlying area, it may be neccessary to return the product to the store nearest to you. Our service operator will advise you of your repair procedure.

2. Cost of Repairs

- 2.1 Under warranty
 - Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty. (refer to "warranties" section in this manual)
 - Any items that need to be repaired that are NOT covered in the warranty will be for the consumer's expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

2.2 Out of Warranty

• Any items that need to be repaired once the warranty has expired will be for the consumer's expense including call out fees. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase or a warranty number. Warranty numbers can be issued through contacting our call centre on 08 9301 5557 or online at www.trojanfitness.com.au. If such proof is not available, then not with standing anything to the contrary herein, the service agent's prevailing charges for services/ repairs including call-out and/or spares willbe payable by the Consumer upon collection or delivery of the repaired product.

The Consumer does not need to return the product to the store.

The Consumer shall phone the Trojan hotline on 08 9301 5557 and the Supplier's authorized agent will at its discretion either repair the item at the Consumer's residence or collect and repair the item at their premises.

During the warranty period the product may only be serviced and/or repaired by the Supplier's duly authorized agent(s).

TCOJAN®	ATTACH RECEIPT
CLIENT DETAILS TEL	: 08 9301 5557 / FAX : 08 9301 4551 / www.trojanfitness.com.au
NAME	ADDRESS
EMAIL	
CELL	
TEL (H)	
TEL (W)	
FAX	
PRODUCT DETAILS	
DATE OF PURCHASE dd / mm / yy	DISCRIPTION PRODUCT
SERIAL NUMBER	
TILL SLIP NUMBER	
STORE PURCHASED AT	



Trojan Fitness Pty Ltd 8/200 Winton Road - 6027 Joondalup Perth - Western Australia